

## BAZOOKA BALL!

Bazooka balls are essentially nerf type balls shot out of a paintball gun with an adapter instead of a traditional barrel. They are single shot. You simply shove a ball in the end of the barrel adapter and pull the trigger. They are great in the summer, because you don't have to spend countless hours cleaning paint off the guns while trying to run camp. You also don't have to worry about kids picking up paint off the ground and putting it back into the hoppers, and you can play indoors!

### Materials Needed

- Paint Ball Gun
- 2" Inch Stress Ball
- 1" Inch PVC
- 1" to 1 ½" Slip Coupling
- 1 ½" Coupling (the longer the coupling the better.)
- Athletic Tape
- Electrical Tape for Decoration

### Assembling Adapters

1. Cut the PVC into 8-12" sections.
2. Glue the adapter onto the sections you cut in step 1.
3. Glue the couplers to the adapters.
4. Wrap a 2" wide section of athletic tape around the barrel enough times that the PVC adapters you made fit snugly, won't fall off, and won't allow air to escape except out the end of the barrel.
5. Turn the paintball markers all the way up.
6. Put a ball in the end of the adapter.
7. Shoot your coworkers just to make sure you did it right!



### Tips:

- The longer you are coupling the further your stress ball will shoot.
- Be sure you turn up your FPS on paintball gun.

Instructions originally created by **IRONWOOD CAMP**. Update by Grant Lockard on 4/12/18. Have any questions, contact Grant Lockard at [Grant@hpcamp.org](mailto:Grant@hpcamp.org)

